



**DWL-P100**

Power-Over-Ethernet Adapters

**Manual**


---

# Introduction

---

## About *Power Over Ethernet* (POE)


The DWL-P100 Power Over Ethernet (POE) Adapters are design to supply operational power to a Wireless Access Point. These Power Over Ethernet Adapters give users the ability to mount an Access Point virtually anywhere in a building no matter where the power outlet is located such as ceilings, attics, or roofs. It eliminates the need to use an AC-DC power supply at the Access Point making the setup more convenient. D-Link’s DWL-P100 Power Over Ethernet Adapters take advantage of the unused cable pairs within Ethernet Cat 5 cabling. The Base Unit inserts DC voltage into the unused wires therefore allowing the single Category 5 cable to carry both Ethernet data and DC power to an Access Point. The POE Terminal Unit splits the data and DC power apart, which is then supplied to the Access Point.

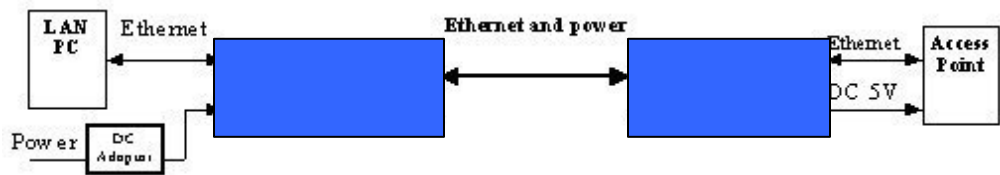


---

# Contents of Package

---

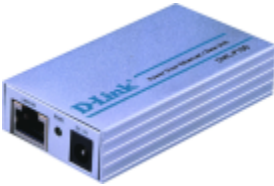

(1)

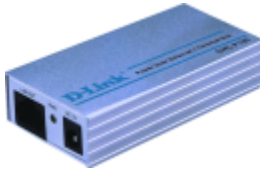


(2)



(3)



(4)

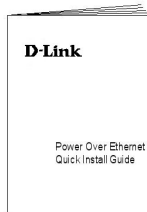

(5)



(6)

- 
1. D-Link Power Over Ethernet / Base Unit
  2. D-Link Power Over Ethernet / Terminal Unit
  3. AC/DC power Adapter
  4. Ethernet Cable
  5. Quick Installation Guide
  6. DC Power cable
-

---

# The D-Link DWL-P100

---

The DWL-P100 includes two modules:

- *Power Over Ethernet* / Base Unit
- *Power Over Ethernet* / Terminal Unit

The Base *Power Over Ethernet* module plugs into the wall AC outlet and also connects to the wired hub. This will supply both low-voltage DC power and data over the existing Category 5 cabling. The Terminal *Power Over Ethernet* module separates the DC power and data, and connects conveniently to the Wireless Access Point.

---

## Features

---


- Provides DC power over existing Category 5 cabling to Access Points
- Transforms incoming AC power into low-voltage DC power
- Base and Terminal *Power Over Ethernet* modules powers any Wireless Access Point requiring 5V/1A DC input
- Protects Access Point from possible damages due to power-surges



---

# Connection Architecture

---

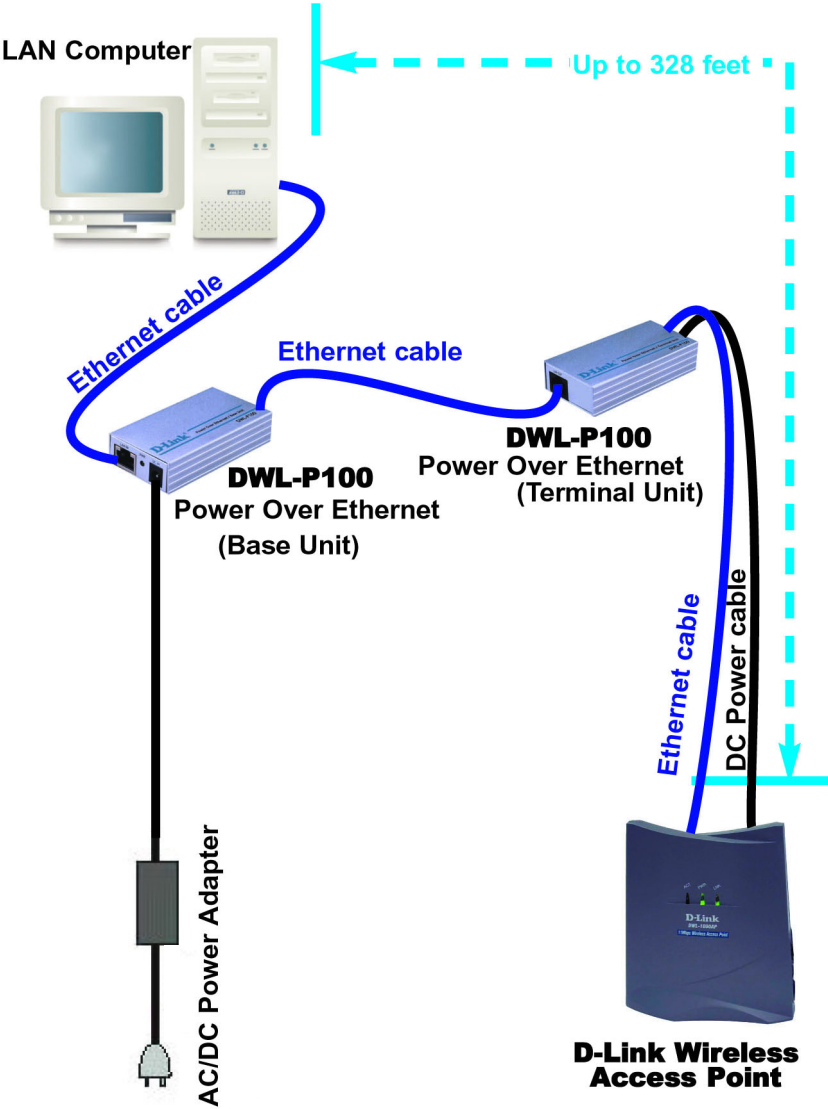

---

# Specifications

---

- Category 5 pin power usages: 4/5 , 7/8
  - Output Voltage 5VDC/1A (Terminal side)
  - Ethernet Connector: RJ-45
  - Ethernet Data Rate: 10/100 Mbps
  - Number of AP's it can power: 1
  - Ethernet Data Cable: TIA/EIA-568, Category 5 Cable
  - Device Weight (pair): 0.269 lbs
  - Dimensions: 3.15in x 1.73in
- 

# Hardware Installation

---

1. Connect the cable from the PC/Hub/Switch to the Base Unit “LAN IN”
2. Connect the Power Adapter to the Base Unit “DC 15V IN.” The green PWR LED on the Base Unit should light up.
3. Connect the cable from the Base Unit “LAN OUT” to the “LAN IN” of the Terminal Unit. (max cable length up to 328ft/100m, as defined by IEEE 802.3)
4. Connect an Ethernet cable from the Terminal Unit “LAN OUT” to the LAN port of the Wireless Access Point (AP).
5. Connect the “DC 5V OUT” from the Terminal Unit to the DC 5V input port of the AP using the power cable provided. The green PWR LED of the Terminal Unit should light up.
6. Operate the Wireless Access Point normally.

---

# Contacting Technical Support

---

You can find the most recent software and user documentation on the **D-Link** website.

**D-Link** provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact **D-Link** technical support through our web site, e-mail, or by phone.

United States technical support is available Monday through Friday from 6:00 a.m. to 6:00 p.m. (PST.)

**Web:**     <http://www.support.dlink.com>

**Email:**    [support@dlink.com](mailto:support@dlink.com)

**Phone:**    949-790-5290

If you are a customer residing outside of the United States, please refer to the list of **D-Link** locations that is included in this manual.

---

# D-Link Offices

---

D-Link Australia  
Unit 16, 390 Eastern Valley Way  
Roseville, NSW 2069,  
Australia  
TEL: 61-2-94177100  
FAX: 61-2-94171077  
URL: [www.dlink.com.au](http://www.dlink.com.au)

D-Link Benelux  
Fellenoord 1305611 ZB  
EindhovenThe Netherlands  
TEL: 31-40-2668713  
FAX: 31-40-2668666  
URL: [www.dlink-benelux.nl/](http://www.dlink-benelux.nl/)

D-Link Canada  
#2180 Winston Park Drive  
Oakville, Ontario, L6H 5W1  
Canada  
TEL: 1-905-8295033  
FAX: 1-905-8295095  
URL: [www.dlink.ca](http://www.dlink.ca)

D-Link China  
2/F., Sigma Building, 49 Zhichun Road,  
Haidian District, 100080 Beijing,  
China  
TEL: 86-10-88097777  
FAX: 86-10-88096789

D-Link South America  
Isidora Goyechea 2934 of 702,  
Las Condes  
Santiago ÿV Chile S.A.  
TEL: 56-2-232-3185  
FAX: 56-2-232-0923  
URL: [www.dlink.cl](http://www.dlink.cl)

D-Link Denmark  
Naverland 2, DK-2600  
Glostrup, Copenhagen,  
Denmark  
TEL: 45-43-969040  
FAX: 45-43-424347  
URL: [www.dlink.dk](http://www.dlink.dk)

D-Link Middle East  
7 Assem Ebn Sabet Street Heliopolis  
Cairo  
Egypt  
TEL: 20-2-6356176  
FAX: 20-2-6356192  
URL: [www.dlink-me.com](http://www.dlink-me.com)

D-Link Finland  
Thlli-ja Pakkahuone Katajanokanlaituri 5  
FIN-00160 Helsinki  
Finland  
TEL: 358-9-622-91660  
FAX: 358-9-622-91661  
URL: [www.dlink-fi.com](http://www.dlink-fi.com)

D-Link France  
Le Florilege #.2, Allee de la Fresnerie  
78330 Fontenay le Fleury  
France  
TEL: 33-1-30238688  
FAX: 33-1-30238689  
URL: [www.dlink-france.fr](http://www.dlink-france.fr)

D-Link Germany  
Schwalbacher Strasse 74  
D-65760 Eschborn  
Germany  
TEL: 49-6196-77990  
FAX: 49-6196-7799300  
URL: [www.dlink.de](http://www.dlink.de)

D-Link India  
Plot No.5, Kurla-Bandra Complex Rd.  
Off Cst Rd. Santacruz (E), Bombay - 400  
098  
India  
TEL: 91-22-652-6696  
FAX: 91-22-652-8914  
URL: [www.dlink-india.com](http://www.dlink-india.com)

---

D-Link Italia  
via Nino Bonnet n. 6/b  
20154 jV Milano,  
Italy  
TEL: 39-02-2900-0676  
FAX: 39-02-2900-1723  
URL: [www.dlink.it](http://www.dlink.it)

D-Link Japan  
10F, 8-8-15 Nishi-Gotanda  
Shinagawa-ku, Tokyo 141,  
Japan  
TEL: 81-3-5434-9678  
FAX: 81-3-5434-9868  
URL: [www.d-link.co.jp](http://www.d-link.co.jp)

D-Link Norway  
Waldemar Thranesgt. 77,  
0175 OsloNorway  
TEL: 47-22-991890  
FAX: 47-22-207039

D-Link Russia  
Michurinski Prospekt 49,  
117607 Moscow,  
Russia  
TEL: 7-095-737-3389, 7-095-737-3492  
FAX: 7-095-737-3390

D-Link International (Singapore)  
1 International Bussiness Park  
#03-12 The Synergy  
Singapore 609917  
TEL: 65-774-6233  
FAX: 65-774-6322  
URL: [www.dlink-intl.com](http://www.dlink-intl.com)

D-Link South Africa  
102 - 106 Witchhazel Avenue  
Einstein Park 2  
Block B  
Highveld Technopark  
Centurion, South Africa

TEL: 27(0)126652165  
FAX: 27(0)126652186

D-Link Spain  
Gran Via de Carlos III,  
843øX Edificio Trade08028 BARCELONA  
TEL: 34 93 4965751  
FAX: 34 93 4965701  
URL: [www.dlinkiberia.es](http://www.dlinkiberia.es)

D-Link Sweden  
P.O. Box 15036, S-167 15 Bromma  
Sweden  
TEL: 46-(0)8564-61900  
FAX: 46-(0)8564-61901  
URL: [www.dlink.se](http://www.dlink.se)

D-Link Taiwan  
2F, No. 119 Pao-Chung Rd.  
Hsin-Tien, Taipei  
Taiwan  
TEL: 886-2-2910-2626  
FAX: 886-2-2910-1515  
URL: [www.dlinktw.com.tw](http://www.dlinktw.com.tw)

D-Link U.K.(Europe)  
4th Floor, Merit House  
Edgware Road, Colindale  
London NW9 5AB  
U.K.  
TEL: 44-20-8731-5555  
FAX: 44-20-8731-5511  
BBS: 44-181-235-5511  
URL: [www.dlink.co.uk](http://www.dlink.co.uk)

D-Link U.S.A  
53 Discovery Drive  
Irvine, CA 92618  
U.S.A.  
TEL: 1-949-788-0805  
FAX: 1-949-753-7033  
URL: [www.dlink.com](http://www.dlink.com)

---



Building Networks for People

Rev. 1.0